

2.1 CH MULTIMEDIA SPEAKER SYSTEM



SY-1290

USER MANUAL

DEAR CUSTOMER

Congratulations on the purchase of your new 2.1 Multimedia Speaker System SY-1290.

Setting up your speaker

Important: For your safety, set up the system before plugging it into a power source.
1.Before attaching the cables to the subwoofer, place the two front satellite speakers on either side of your monitor. Depending on where you place your speakers, adjust them to direct the sound towards you. For the best sound quality, place the subwoofer on the floor beneath your desk. Be sure to maintain at least 6 inches of spacing around the subwoofer to allow for adequate ventilation.

2.Connect the satellite speakers to the subwoofer as shown on the previous page.

3.A.If you have a PC:
Plug the audio input cable from the subwoofer into the speaker output on your PC(picture)

B.If you have a video game console (PlayStation®2, Xbox™, or GameCube®)
• Requires the Console Gaming Y-adapter(sold separately).Connect the red and white RCA cable that came with you console gaming system to the matching red and white RCA jacks on the Console.
• Gaming Y-adapter.
Connect the 3.5 mm Stereo Cable connected with Subwoofer to the lime green input on the Console

C. If you have a DVD/VCD player:
• Requires a dual-RCA cable(normally provided with DVD/VCD player).Connect the red and white RCA Cable to the output Jacks on the players.
• Connect another end of Dual-RCA cable to the Audio inputJacks on Subwoofer.

4.Mp3 PLAYBACK
• Insert the USB pendrive & SD card and the unit will play the songs automatically (the songs must be stored in mp3 format)
• Press the buttons PLAY/PAUSE/NEXT or PREVIOUS on the remote control to select the desired function.

KNOW THE FUNCTIONS

① ►► (Mp3 next control button)

② ► (mp3 play control button)

③ VOL+(vol up button)


④ EQ (sound field effort)

⑤ MODE (select input)

⑥ USB/SD(usb and sd card shift,support mp3 playing,support mp3 wma format)

⑦ ◀◀ (Mp3 previous control button)

⑧ VOL-(vol down button)

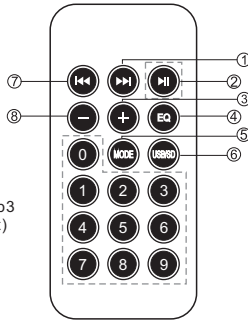

NOTES:


The number button on the remote control from 0~9 are used to jump to a particular song directly, press the song number & ● key to listen that song.

For example : In USB/SD/MMC card has 100 songs and you want to jump on song number 51, please press 5 & 1 and ●, similarly if you want to listen to jump to song on 9 position, simply press 9 number button and ● to jump


CONTENT IN THE PACKAGE:

⚠ This symbol indicates that there are important operating & maintenance instructions in the literature accompanying this unit.

⚡ This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

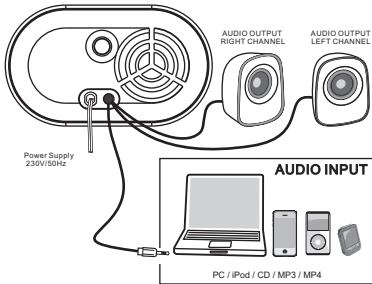


SETUP DIAGRAM

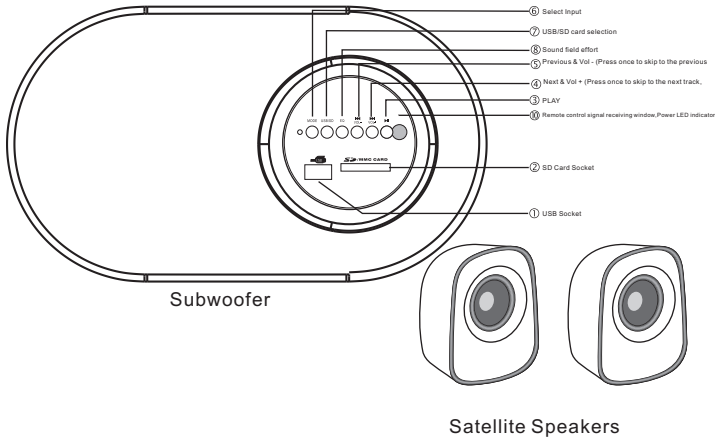

SPECIFICATION:

- Total system power: RMS 10 watts
- Subwoofer power: RMS 6 watts
- Satellites power: RMS 2 watts x2
- P.M.P.O:800 Watts
- THD: 0.05%(1W)
- Frequency response:50-60Hz~20Khz(±3dB)
- Speaker unit:Subwoofer 3" 6Ohm
- Remote distance:6 meter
- Material of the cones:plastic
- Weight:1.7kg
- Subwoofer driver: 3"
- Satellite driver: 2" x 2
- Subwoofer dimensions:W217XH127x130mm
- Satellite dimensions:W84xH107xD82mm
- Satellite 2" 4Ohm

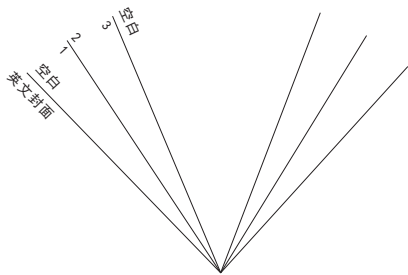

SISTEMA DE ALTAVOCES MULTIMEDIA 2.1



SY-1290

MANUAL DE USUARIO

BIENVENIDOS

Enhorabuena por su compra de su nuevo sistema de altavoces multimedia 2.1 - SY-1290.

Configuracion de la sistema

Importante: Por su seguridad, configure la sistema antes de enchufarlo a la toma en la pared.
1. Antes de conectar los cables al subwoofer, coloque los dos satélites en cada lado del monitor. Dependiendo de donde coloque los altavoces, ajústalos para que el sonido proyecte hacia usted. Para obtener mejores resultados, sitúe el subwoofer sobre el suelo debajo de la mesa donde va el monitor. Asegúrese de que hay 6 pulgadas de espacio alrededor del subwoofer para que haya suficiente ventilación.

2. Conecte los satélites al subwoofer como se muestra en la pagina anterior.

3. A . Si tiene un PC:

Enchufe el cable de entrada de audio del subwoofer a la salida de los altavoces en su PC (ver foto).

B. Si tiene un consola (PlayStation 2, Xbox, o Gamecube)

- Requiere el adaptor-Y para videojuegos (vendido por separado). Conecte el cable RCA rojo y blanco incluido con su videoconsola para que coincide con las salidas rojo y blanco del cable RCA en su consola.
- Adaptador-Y
Conecte el Cable Estéreo de 3.5mm conectado al subwoofer, a la entrada de color lima-verde en la consola.

C. Si tiene un reproductor DVD/VCD:


- Requiere un cable RCA dual(normalmente incluido con su reproductor DVD/VCD). Conecte el cable RCA rojo y blanco a las mismas salidas en el reproductor.
- Conecte el otro extremo del cable RCA-Dual a la entrada de audio en el subwoofer.

4. Reproducir MP3

- Inserte el USB o Tarjeta SD en las ranuras correspondientes y la unidad empezara a reproducir las canciones automaticamente. (Las canciones deben de ser guardados en formato MP3).
- Pulse los botones Reproducir/Pausa/Siguiente/Anterior en el mando a distancia para seleccionar lo que desee.
- Pulse los botones Play/Pausa/Sig

FUNCIONES DEL MANDO A DISTANCIA

1. (Botón Siguiente MP3)
2. (Botón Reproducir MP3)
3. Vol + (Botón aumentar volumen)
4. EQ (Ecualizador)
5. MODE (Seleccionar función)
6. USB/SD (Seleccionar entre USB/SD)
7. (Botón anterior MP3)
8. VOL - (Botón disminuir volumen)

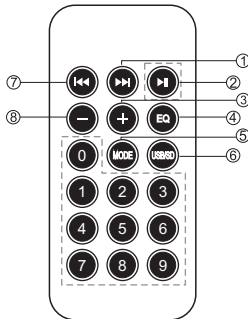

Notas:


los botones numéricos del mando a distancia (0-9) permiten saltar a cualquier pista que desea escuchar. Presione el numero deseado y ● para empezar la reproducción de la canción.

Por Ejemplo: En el USB/SD tiene 100 canciones, y quiere saltar a la canción 51, presione 5, y 1 y luego ●, y otra manera si quiere saltar a la canción numero 9, simplemente presione el 9 y ●.


CONTENIDO:

Este símbolo indica que existen instrucciones de operacion y mantenimiento importantes en el manual que acompaña a esta unidad.

Este símbolo indica que existen voltajes muy altos por lo que existe el riesgo de producir descargas eléctricas.

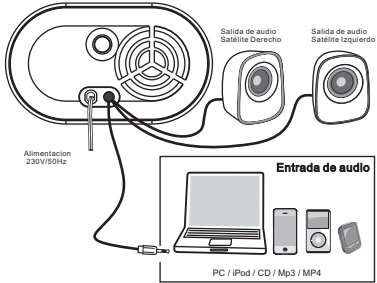

Configuración

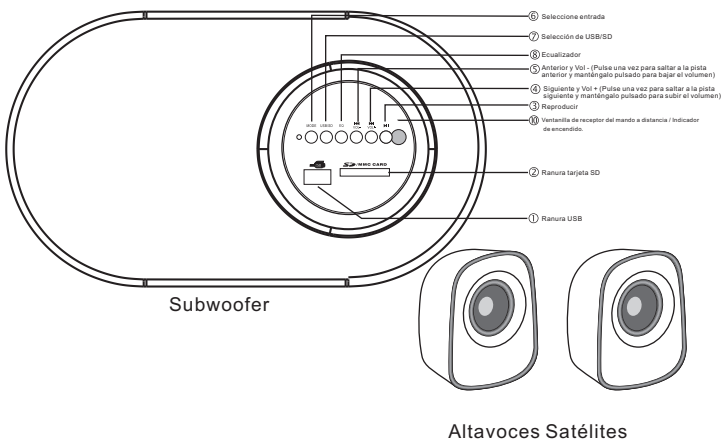

Especificaciones:

- Potencia total: 10 W RMS
- Potencia Subwoofer: 6 W RMS
- Potencia Satélites: 2 W x 2 RMS
- P.M.P.O: 800 W
- T.H.D: 0.05% (1W)
- Frecuencia de Respuesta: 50-60Hz~20Khz(+ - 3dB)
- Altavoces: Subwoofer- 3" 6 Ohm
- Satélites - 2" 4 Ohm
- Mando a distancia: 6 metros
- Material: Plástico
- Peso: 1.7Kg
- Controlador Subwoofer: 3"
- Controlador Satélites: 2" x 2
- Dimensiones Subwoofer: 217x127x130mm
- Dimensiones Satélites: 84x107x82mm